



“BEST” Brand
OUTDOOR GAS STOVE

MODEL NO.: BG01B, BG02BM, BG03BSM, BG04BMMS

Important:

Read these instructions carefully before use.
Familiarise yourself with the appliance before
connecting it to the gas container.
Keep the Instruction manual for future reference.

OUTDOOR USE ONLY

INSTRUCTIONS

Dear Customer,

Thank you for purchasing one of our products.

We are confident that this appliance will perform to your expectation for your outdoor life. This appliance is simple to operate however, before you use it we urge you to read this instruction manual thoroughly and carefully in order to operate is safe and to achieving the best performance.

This appliance is supplied in many different configuration, design and colours and the illustrations in this manual are indicative only.

The appliance must be installed and serviced only by qualified and duly authorized person.

The manufacturer and its distributors cannot be held responsibility for any damage or loss to persons or belongings resulting from the incorrect installation of the appliance or from its incorrect use.

IMPORTANT

- All parts & components must not be removed or replaced unless by qualified service person.
- Parts sealed by the manufacturer or his agent must not be altered by the user
- keep the instruction manual for future reference.

CAUTION: When using this appliance, carbon dioxide may be produced, the accumulation of which can be hazardous. The product must therefore only be used outdoors or in suitably ventilated environments to ensure the proper supply of air for combustion and to prevent the formation of mixtures containing unburnt gas. Under no circumstances use the appliance inside dwellings.

WARNING: *In order to avoid burns, do not put hands or other body parts over the burner while lighting it or when it is in use.*



WARNING: *Do not store or use gasoline or other flammable vapors, liquids, or chemicals near this or any other gas burning appliance.*



TECHNICAL REQUEST & DATA:

- Check the rating plate to ensure that the appliance is suitable for the available gas supply..

BEST OUTDOOR GAS STOVE BG01B		CE 1008 11		WARNING	
Country of destination	BE, FR, GB, GR, IE IT, PT, ES, CH	CY, CZ, DK, EE, FI, LT MT, NL, NO, SK, SI, SE HU, BG, LV, LU, RO	PL	DE, AT, CH	
Appliance categories	I 3+	I 1B P	I 1B P	I 1B P	
Type of gas	G30/G31	G30	G30	G30	
Supply pressure(mbar)	28-30/37	30	37	50	
Injector Size (mm)	0.59	0.59	0.55	0.51	
Heat Input(Hs)	@	1.4 (kW)		1.4 (kW)	
	Total	1.4 kW (102g/h)		1.4 kW (102g/h)	
Chinabest Home Appliance Co., Ltd Add: No.2, Fuqing Yi Road, Henglan, Zhongshan, Guangdong, China					

1. Read this instruction before using the appliance.
2. For outdoor use only.
3. Warning:accessible parts may be very hot, Keep young children away.
4. Never move it during operation. Wait for about 7 minutes after extinguished the flame before moving it.
5. Check the gas type before you connect it to the camp stove, improper gas will cause serious danger.

BEST OUTDOOR GAS STOVE BG02BM		CE 1008 11		WARNING	
Country of destination	BE, FR, GB, GR, IE IT, PT, ES, CH	CY, CZ, DK, EE, FI, LT MT, NL, NO, SK, SI, SE HU, BG, LV, LU, RO	PL	DE, AT, CH	
Appliance categories	I 3+	I 1B P	I 1B P	I 1B P	
Type of gas	G30/G31	G30	G30	G30	
Supply pressure(mbar)	28-30/37	30	37	50	
Injector Size (mm)	0.59/0.53	0.59/0.53	0.55/0.49	0.51/0.46	
Heat Input(Hs)	@	1.4/1.2 (kW)		1.4/1.1 (kW)	
	Total	2.6 kW (190g/h)		2.5 kW (182g/h)	
Chinabest Home Appliance Co., Ltd Add: No.2, Fuqing Yi Road, Henglan, Zhongshan, Guangdong, China					

1. Read this instruction before using the appliance.
2. For outdoor use only.
3. Warning:accessible parts may be very hot, Keep young children away.
4. Never move it during operation. Wait for about 7 minutes after extinguished the flame before moving it.
5. Check the gas type before you connect it to the camp stove, improper gas will cause serious danger.

BEST OUTDOOR GAS STOVE BG03BSM		CE 1008 11		WARNING	
Country of destination	BE, FR, GB, GR, IE IT, PT, ES, CH	CY, CZ, DK, EE, FI, LT MT, NL, NO, SK, SI, SE HU, BG, LV, LU, RO	PL	DE, AT, CH	
Appliance categories	I 3+	I 1B P	I 1B P	I 1B P	
Type of gas	G30/G31	G30	G30	G30	
Supply pressure(mbar)	28-30/37	30	37	50	
Injector Size (mm)	0.59/0.47/0.53	0.59/0.47/0.53	0.55/0.43/0.49	0.51/0.40/0.46	
Heat Input(Hs)	@	1.4/0.85/1.2 (kW)		1.4/0.85/1.1 (kW)	
	Total	3.45 kW (252g/h)		3.35 kW (244g/h)	
Chinabest Home Appliance Co., Ltd Add: No.2, Fuqing Yi Road, Henglan, Zhongshan, Guangdong, China					

1. Read this instruction before using the appliance.
2. For outdoor use only.
3. Warning:accessible parts may be very hot, Keep young children away.
4. Never move it during operation. Wait for about 7 minutes after extinguished the flame before moving it.
5. Check the gas type before you connect it to the camp stove, improper gas will cause serious danger.

BEST OUTDOOR GAS STOVE BG04BMMS		CE 1008 11		WARNING	
Country of destination	BE, FR, GB, GR, IE IT, PT, ES, CH	CY, CZ, DK, EE, FI, LT MT, NL, NO, SK, SI, SE HU, BG, LV, LU, RO	PL	DE, AT, CH	
Appliance categories	I 3+	I 1B P	I 1B P	I 1B P	
Type of gas	G30/G31	G30	G30	G30	
Supply pressure(mbar)	28-30/37	30	37	50	
Injector Size (mm)	0.59/0.53/0.53/0.47	0.59/0.53/0.53/0.47	0.55/0.49/0.49/0.43	0.51/0.46/0.46/0.40	
Heat Input(Hs)	@	1.4/1.2/1.2/0.85 (kW)		1.4/1.1/1.1/0.85 (kW)	
	Total	4.65 kW (340g/h)		4.45 kW (324g/h)	
Chinabest Home Appliance Co., Ltd Add: No.2, Fuqing Yi Road, Henglan, Zhongshan, Guangdong, China					

1. Read this instruction before using the appliance.
2. For outdoor use only.
3. Warning:accessible parts may be very hot, Keep young children away.
4. Never move it during operation. Wait for about 7 minutes after extinguished the flame before moving it.
5. Check the gas type before you connect it to the camp stove, improper gas will cause serious danger.

PARTS LIST:

When you open the box of outdoor stove, you will find the following parts:

The outdoor stove body

1pc

The wire pan-grate

1pc (BG01B/BG02BM/BG03BSM)
or 2pcs(BG04BMMS)

- Instruction manual

1pc

NOTICE: The parts may be different for different clients, check with the dealer first to make sure that you understand the parts clearly.

INSTRUCTION FOR ASSEMBLING AND INSTALLING

The following steps must be carried out in well ventilated places far from flames or flammable materials.

- The cooker must be connected to the cylinder using a rubber hose for LPG in conformity with the regulations of the country in which the cooker is to be used.
- The hose must be no longer than 1.5m and should be replaced in compliance with current legislation in the country use when its time has run out
- Always use a low-pressure regulator to connect the cooker to the cylinder. This regulator **MUST** be with normalised fixed calibration at 30 mbar for butane and 37 mbar for propane.
- Metal hose clips suitable for gas must be used to secure the hose to the cooker and to the regulator in the countries where it is allowed to fix the hose to the actual appliance.

CAUTION

- Never use flames to check for gas leaks. Always use soap water.
- Never operate the appliance if the rubber hose is not firmly secured the recommended clips.
- Do not use the appliance should there be leaks, damage or malfunction.
- Avoid the lid falling down accidentally from their raised position.

OPERATION

- Place the cooker on a firm, level surface
- Locate the cooker far from flammable liquids and in any case far from objects that are affected by heat.
- Check that cooker taps are closed.
- Check that the burner spring clips in the part underneath the burner are firmly positioned and cannot be removed.
- If the model has a lid, open the lid gently.
- Fully open the gas cylinder tap.
- Press the cooker tap corresponding to the burner to be lit and turn it counter-clockwise to the maximum setting.
- This model has no piezo: put a flame to the burner to be lit.
- Adjust the flame as required.
- Do not move the cooker with the burner lit

AFTER USE

- Close the gas cylinder tap.
- Close the cooker tap.



REPLACING THE GAS CYLINDER

- The gas cylinder must be replaced outdoors and in any case far from flames or any inflammable substances.
- Check that the cooker and the cylinder taps are perfectly closed
- Unscrew the pressure regulator from the cylinder tap.
- Before fixing the pressure regulator to the cylinder check that the gasket is present on the regulator and that it is intact.
- Tighten the nut of the pressure regulator properly onto the thread of the cylinder tap.

STORE THE GAS STOVE

⚠ WARNING: It is not a toy for children.

Put the product into carton or handle bag when you do not use it, and the product can be stored in house.

Store the product on a level, stable place where out of reach of children.

CLEAN AND MAINTAIN THE GAS STOVE

- Washing liquid and detergent and wet cloth are recommended to clean the gas stove, do not use steel wire.
- Clean the burner cap and base per month. Remove the screw on the burner cap by turning screwdriver counterclockwise. After finishing the cleaning, Install the burner cap and base back by driving the screw clockwise tightly.

Caution:

- All cleaning and maintenance should only be done when the appliance is cool and with the fuel supply turned off .
- Do not let water, soup and food residue get into the burner cap and gas pipe.

REPAIR

Please return the appliance to seller or call the qualified person for repair and spare parts. Do not repair it by yourself

ADVICE FOR CORRECT USE OF THE PRODUCT

- Ensure that objects are positioned at least 50 centimetres from the cooker in all directions.
- Do not let pets roam freely in the vicinity of the cooker.
- Never leave the cooker lit without supervision.
- Never let children approach the cooker.
- Use protective gloves when handling particular hot components
- In the event of malfunction or the smell of gas, never check the heater yourself, but take it to the dealers. In any case close the gas cylinder tap immediately.
- Caution: accessible parts may become very hot, Keep the appliance out of reach of children.
- The following maximum cooking vessel diameters are recommended for the respective cookers:

Caution:

Small Burner:

Minimum diameter of cooking vessel 100mm
Maximum diameter of cooking vessel 140mm

Medium Burner:

Minimum diameter of cooking vessel 140mm
Maximum diameter of cooking vessel 220mm

Big Burner:

Minimum diameter of cooking vessel 140mm
Maximum diameter of cooking vessel 220mm

Manufacturer: Chinabest Home Appliance Co., Ltd
Add: No.2, Fuqing Yi Road, Henglan, Zhongshan, Guangdong, China 528478